



Cotton Candy Machine Instructions

**MACHINE MUST HAVE IT'S OWN OUTLET 15 AMPS.
MACHINE WILL NOT RUN CORRECTLY WITH
ANOTHER APPLIANCE ON THE SAME CIRCUIT.**

Operations Instructions

1. Turn the 2 knobs with the long screws all the way down.
2. Put plastic tub on top of unit.
3. Turn temperature gauge all the way for about 2 minutes.
4. Turn down a little bit before using pour sugar in the top of machine about $\frac{1}{4}$ to $\frac{1}{2}$ cup.
5. Turn on machine and it will start spinning very fast.
6. Use your cotton candy stick to roll up your floss.
7. The hotter it is, the faster it makes it.
8. When done, clean tub with soapy hot water.

DO NOT CLEAN HEATING ELEMENT