



www.partyprorents.com

Frozen Drink Machine Instructions

Operation Instructions

1. Fill the mix tank with the desired liquid product (3 gallons maximum). Do not overfill the tank. NOTE THAT WHEN READY, SLUSH OCCUPIES MORE VOLUME THAN THE LIQUID (approximately 3.5 gallons of slush from 3 gallons of liquid).

If using natural products as a base (coffee, lemon juice, orange juice, etc), it is required that 5 to 7 ounces of sugar per gallon be added. If using a mix from Party Pro Rents, mix ingredients desired from list on side of bottle.

2. Press main power switch and agitator switch to ON position. *Note: The agitator switch must be to ON position before setting to liquid or slush mode*
 - For slush, press the cooler switch to bottom position (II / *).
 - For liquid, press the color switch to the up position (II / "). If the machine is being used as a liquid cooler, it is provided with an inside thermostat for controlling the liquid temperature.

Note that your machine is equipped with a time delay relay that provides for a four-minute delay from the time of the initial start. This is to prevent the compressor from short cycling. Once the compressor is ON, the green light will be on.

Note: The cooler switch is a three position switch and in order to have the compressor off, all the cooler switches need to be in all the middle position

3. To illuminate the mix tank cover display on the top of the unit and the product in the bowl press the display light switch to down position

A minimum of 12-gauge extension cord must be used to operate frozen drink machine. The machine must have it's own 15 to 20 amp circuit breaker.

Do not share breaker with anything else